



# Undercover Tents, LLC

## Operating Instructions

### 6-Burner Range & Oven

**This unit has already been checked by Undercover Tents to ensure it is functioning properly.**

#### 6-Burner Range Top

1. Make sure propane is connected and turned on
  - a. If it's turned off, slowly open the valve on the tank
2. To ignite burners, turn burner knob to *high* and light corresponding burner with grill lighter
  - a. Adjust knob to desired flame level
  - b. Use same process for all burners
3. You're ready to cook
4. When cooking is complete, ensure all burner knobs are in off position

#### Oven

1. Make sure propane is connected and turned on
  - a. If it's turned off, slowly open the valve on the tank
2. Pull lower front panel, allowing it to rotate down
  - a. Insert grill lighter into pilot light hole
3. Locate red thermocouple button underneath unit, press and hold while igniting pilot with grill lighter
  - a. Once lit, remove grill lighter
4. Hold red button for 30-seconds, until pilot remains lit
5. Set temperature knob to desired temperature
6. You're ready to cook
7. When done with oven, simply turn gas off at tank

**If at any time you smell propane or an odor, discontinue use and turn the tank off**

**If this is an emergency situation, call 911**